
RYOBI
TABLE SAW
MODEL NO. BTS10S
REPAIR SHEET

RYOBI TABLE SAW – MODEL NO. BTS10S

FIGURE A

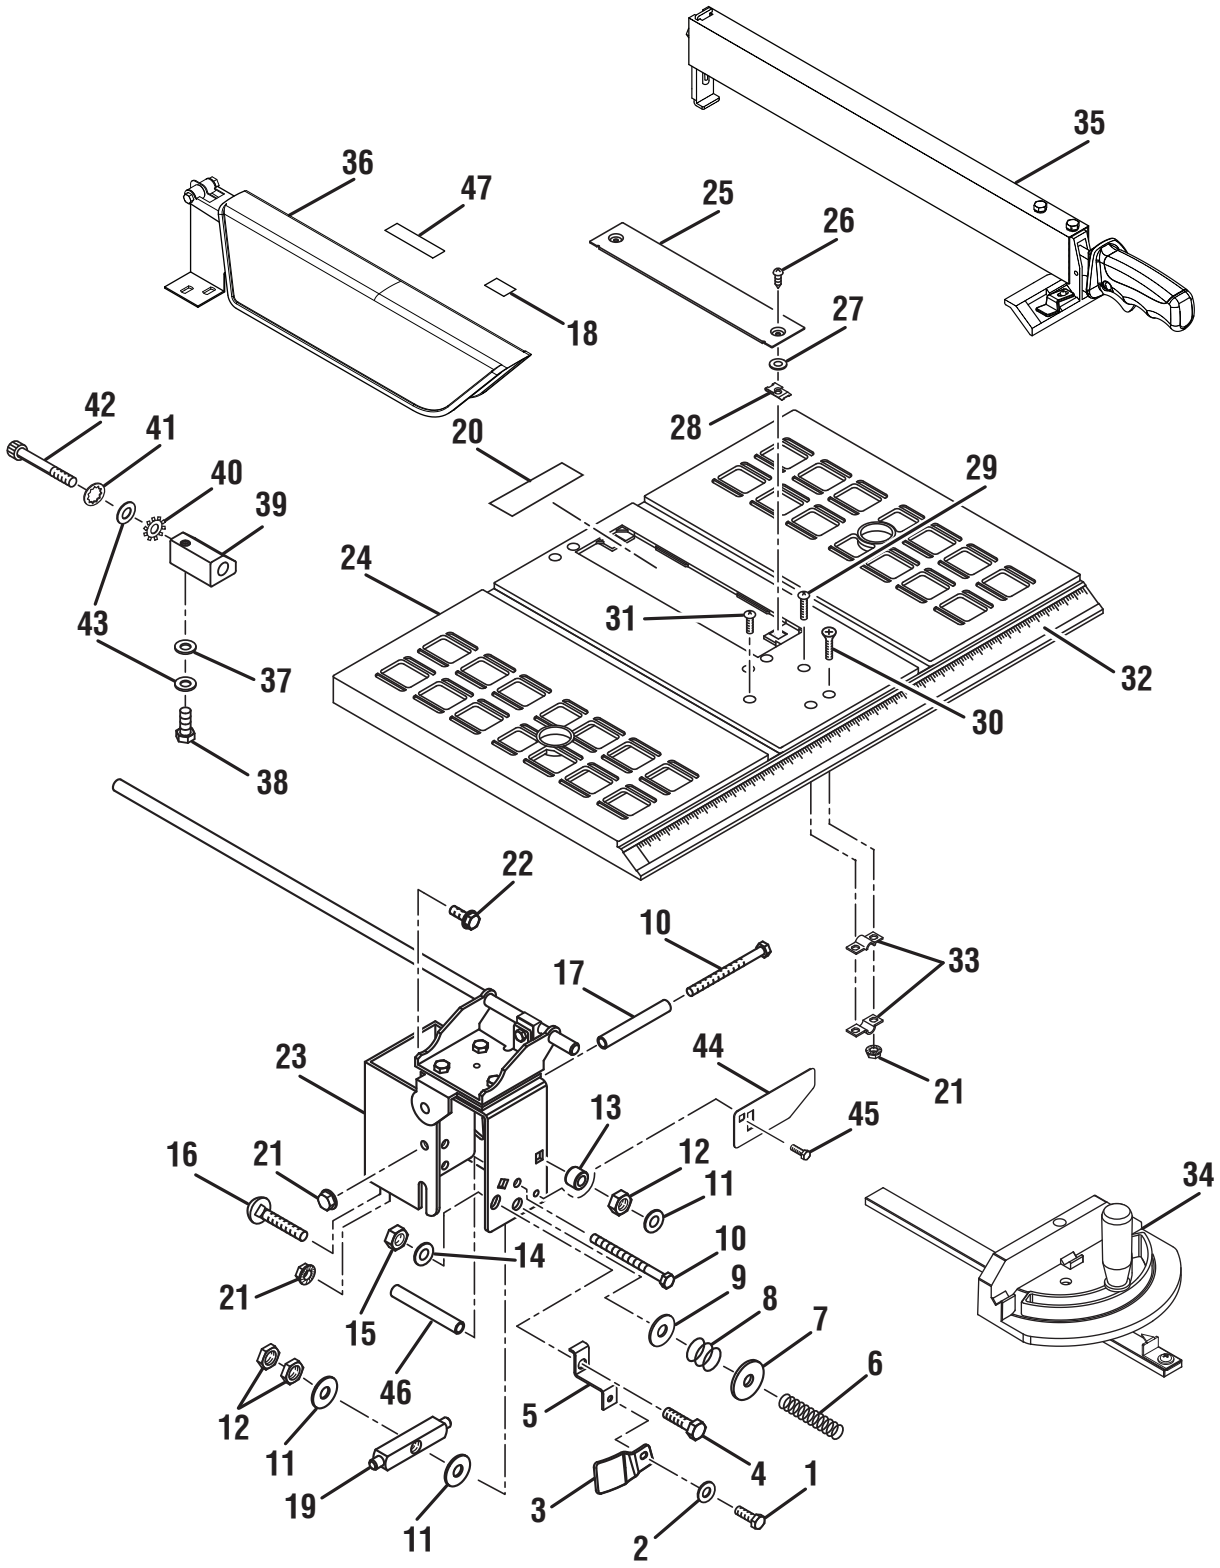


The model number will be found on the data plate attached to the back panel of the cabinet. Always mention the model number in all correspondence regarding your **TABLE SAW** or when ordering repair parts.

PARTS LIST FOR FIGURE A

Key No.	Part No.	Description	Qty.
1	410282702	SCREW (3/16-24 x 3/8 in. HEX HD.	1
2	412042001	EXTERNAL TOOTH LOCK WASHER	1
3	0101140303	POINTER	1
4	410012703	SCREW (5/16-18 x 5/8 in. HEX HD.)	1
5	0101140304	POINTER SEAT	1
6	0101010907	SPRING	1
7	412012708	FLAT WASHER	1
8	0101010906	SPRING	1
9	412012702	FLAT WASHER	1
10	410012702	SCREW (1/4-20 x 3-1/4 in. HEX HD.)	2
11	412012701	WASHER (D1/4 x D16 x t1)	3
12	411012701	HEX NUT (1/4-20)	3
13	0101010903	SPACER	1
14	412042701	FLAT WASHER	3
15	411012702	HEX NUT (5/16-18)	4
16	410032720	CARRIAGE BOLT (1/4-20 x 2 in.)	1
17	0101010905	SPACER	1
18	9181015330202	LABEL (NO HANDS)	1
19	0101210902	BLOCK	1
20	9121015333301	INSERT WARNING LABEL	1
21	411062701	NUT (1/4-20 CHEESE HD.)	11
22	410162003	SCREW (M6 x 18 mm CHEESE HD.)	1
23	A101214301	BRACKET ASSEMBLY	1
24	0101140102	SAW TABLE	1
25	0101010301	THROAT PLATE INSERT	1
26	410192001	SCREW (M4 x 10 mm TRUSS HD.)	2
27	0101141303	RUBBER WASHER	2
28	411182001	J-TYPE TINNERMAN NUT	2
29	410138701	SCREW (1/4-20 x 7/8 in. PAN HD. NYLOCK)	1
30	410102702	SCREW (1/4-20 x 7/8 in. FLAT HD.)	6
31	410138702	SCREW (1/4-20 x 29 mm PAN HD.)	1
32	9101140000302	SCALE LABEL	1
33	0101010303	STRAP	6
34	A101140807	MITER GAUGE ASSEMBLY	1
35	A101140903	RIP FENCE ASSEMBLY	1
36	A101141001	BLADE GUARD ASSEMBLY	1
37	412042702	LOCK WASHER EXTERNAL	1
38	410152716	SCREW (1/4-20 x 1/2 in. SOC. HD.)	2
39	0101010111	SPREADER SEAT	1
40	412042702	LOCK WASHER EXTERNAL	1
41	412032701	LOCK WASHER INTERNAL	1
42	410151709	SOCKET HEAD SCREW (1/4-20 x 57 mm)	1
43	412012030	WASHER	2
44	0101210304	FRONT GUARD	1
45	410012701	SCREW (1/4-20 x 1/2 in. HEX HD.)	1
46	414011002	SPRING PIN	1
47	9181015330203	BLADE GUARD LABEL	1

RYOBI TABLE SAW – MODEL NUMBER BTS10S

FIGURE B

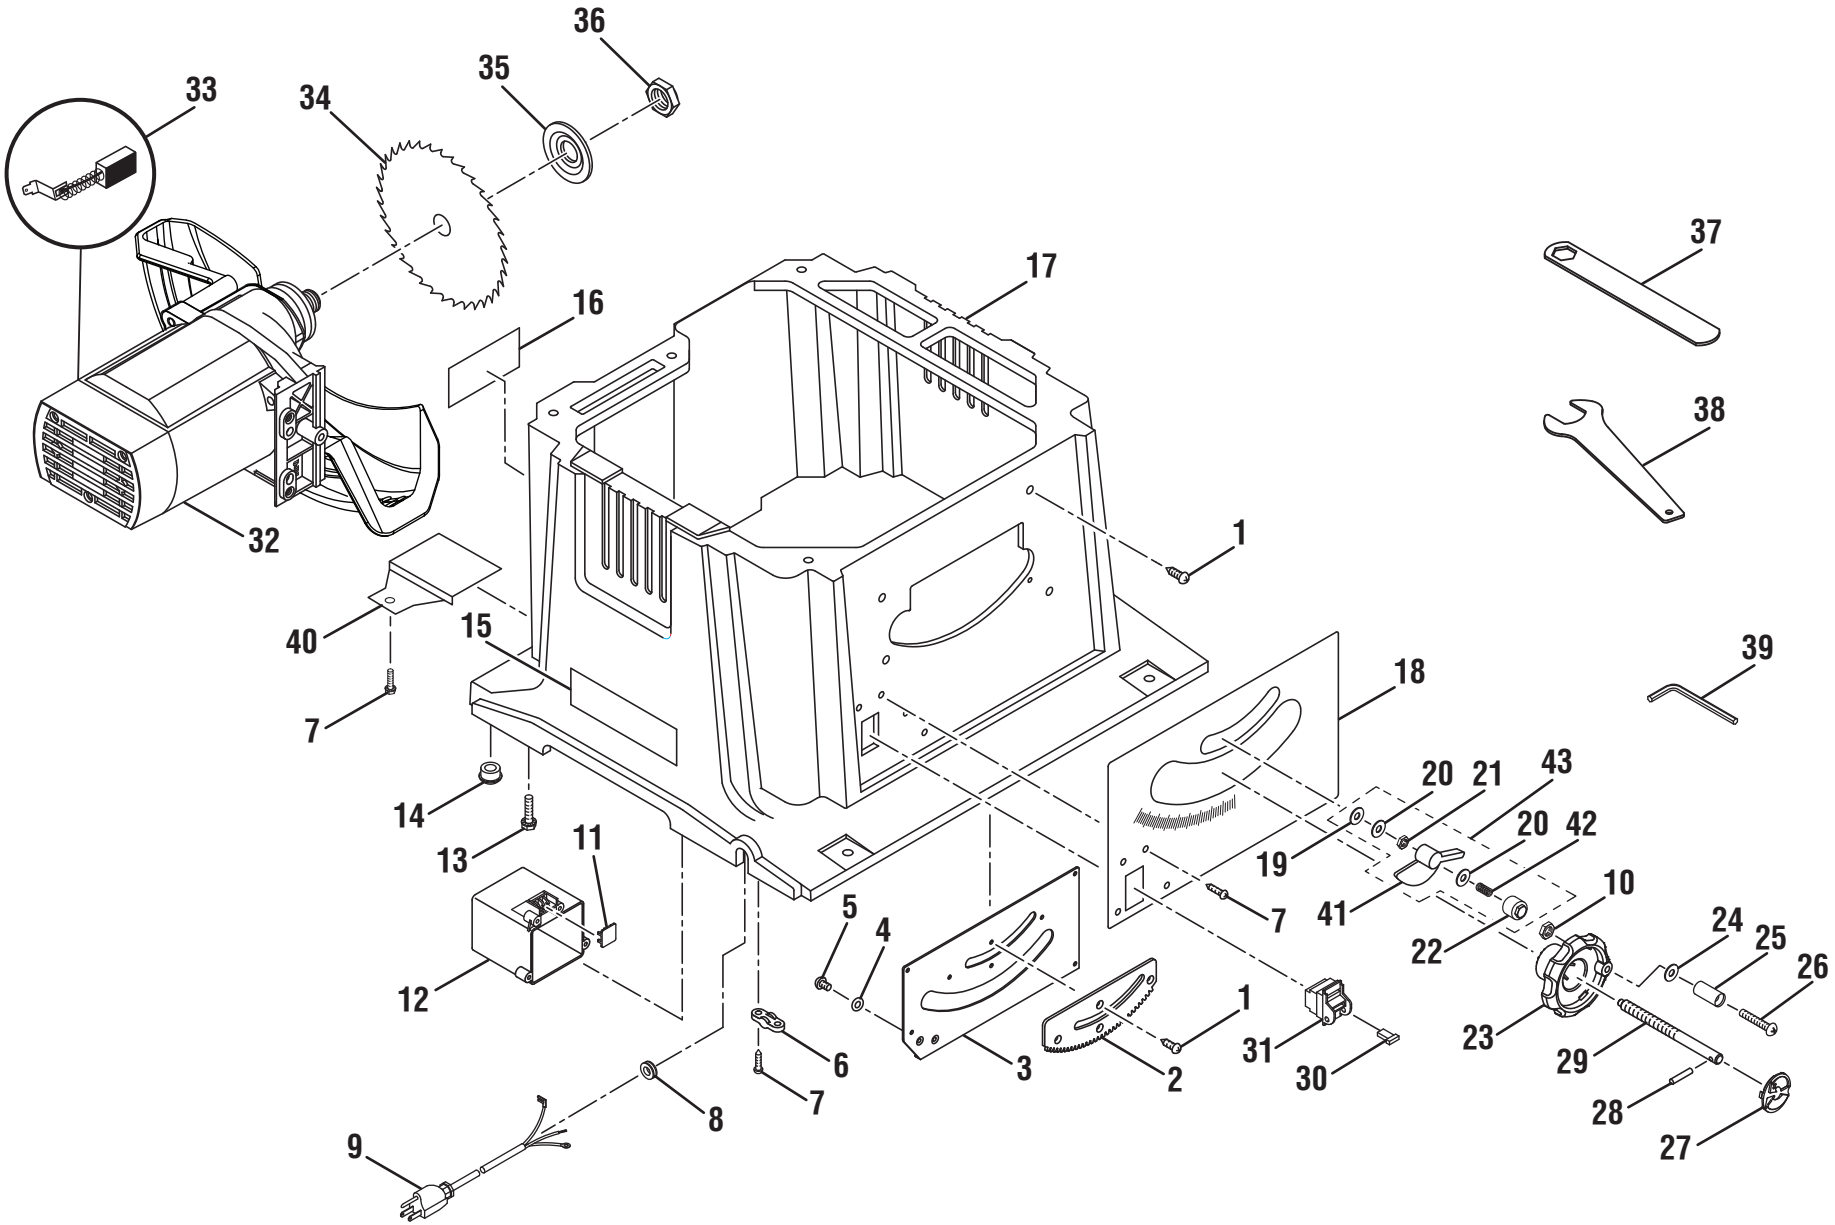

RYOBI TABLE SAW – MODEL NUMBER BTS10S

The model number will be found on a plate attached to the back panel of the cabinet. Always mention the model number in all correspondence regarding your **TABLE SAW** or when ordering repair parts.

PARTS LIST FOR FIGURE B

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	410182001	SCREW (M4 x 7 mm FLAT HD. TAPPING)	8
2	0101010201	GEAR PLATE	1
3	0101040305	REINFORCEMENT PLATE	1
4	412042002	EXTERNAL TOOTH LOCK WASHER	1
5	410132005	PAN HEAD SCREW	1
6	0101040203	CORD CLAMP	1
7	410192002	SCREW (M4 x 16 mm PAN HD. TAPPING)	7
8	0152011814	GROMMET	1
9	0101140701	POWER CORD	1
10	411072702	LOCK NUT (1/4-20)	1
11	0101090302	CORD CLAMP	1
12	0101090201	SWITCH BOX	1
13	410162004	SCREW (M6 x 25 mm CHEESE HD.)	4
14	0111140208	RUBBER FOOT	4
15	9101145330203	WARNING LABEL	1
16	9101145330204	DATA LABEL	1
17	0101140220-42	CABINET	1
18	9101145330101	FRONT PANEL LABEL	1
19	412080001	NYLON WASHER	1
20	412012701	FLAT WASHER (D1/4 x D16 x t1)	2
21	411012701	HEX NUT (1/4-20)	1
22	0101140221	LOCK NUT	1.
23	0101140205	HAND WHEEL	1
24	412011712	FLAT WASHER	1
25	0152010204	HAND WHEEL KNOB	1
26	0101140203	SPECIAL HAND WHEEL SCREW	1
27	0101140206	HAND WHEEL INSERT	1
28	414011003	SPRING PIN	1
29	0101140801	ELEVATING SHAFT	1
30	0101140213	SWITCH KEY	1
31	080015001640	SWITCH	1
32	A101140109	MOTOR ASSEMBLY W/GUARD	1
33	0101015002	BRUSH ASSEMBLY	2
34	***	10 in. BLADE (422010025)	1
35	0101010302	OUTER BLADE WASHER	1
36	0101010920	ARBOR NUT (5/8-18)	1
37	0101010312	15/16 in. ARBOR WRENCH	1
38	0101010313	WRENCH	1
39	0201010904	HEX KEY (M5 x 57 mm)	1
40	0101210208	GUARD (BAFFLE PLATE)	1
41	0101140218	BEVEL LOCK LEVER	1
42	0101140904	SPRING	1
43	A101145201	BEVEL LOCK LEVER ASSEMBLY (INC. PAGE 2 KEY NOS. 11, 12, 13, AND 16; PAGE 4 KEY NOS. 19-22 AND 41-42)	1
	983000355	OPERATOR'S MANUAL	1
	12-05-07 (REV:04)		

*** Standard Hardware Item — May Be Purchased Locally